

PiezoCAD installation is completed in two steps:

- Installing the software from the distribution CD-ROM
- Installing the software key and its device drivers


To install the demo version, use the procedure provided with it. The instructions below are for the distribution software only.

A. Installing PiezoCAD


PiezoCAD installation is initiated by inserting the Distribution CD-ROM in your drive. Open your CD-ROM drive and double click:

PiezoCAD_setup_4.00.exe

If your CD-ROM drive has auto-run enabled, then the setup program will start after closing the drive tray.

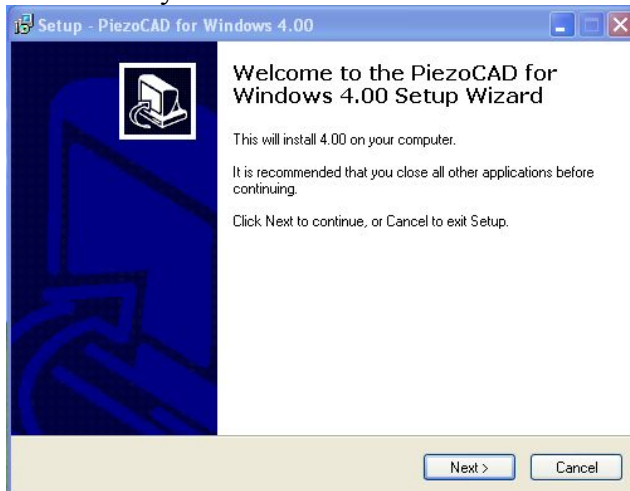

This is the first page, it explains that you are about to install PiezoCAD 4.00. Click Next.

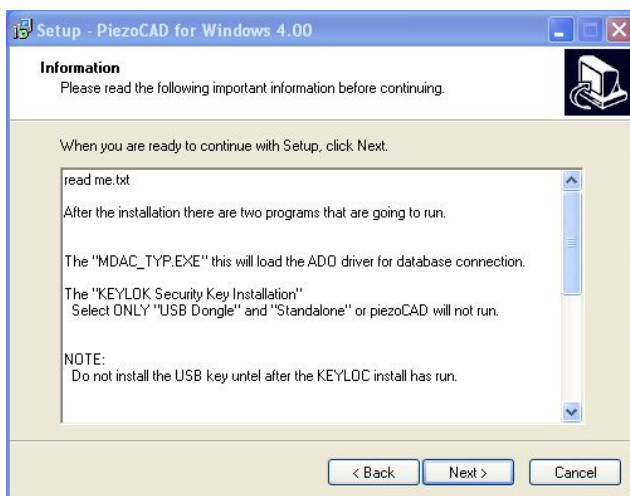

This page contains general information that should be read. Then click Next.



This is the final page. All the check boxes need to be checked to install the Database driver and the USB - KEYLOC driver.


B. Installing the Software Key

PiezoCAD requires that a software locking device known as a software key be present on the USB port. This presence of this key is checked when the software is loaded and at intervals during program usage. If the key is absent, PiezoCAD will not execute, and a message will appear on the screen reminding the user to install the key. The user may install the software on more than one machine, and move the software key from machine to machine as needed. In this manner, the software key forces compliance with the license agreement.

USB port software key:

After the PiezoCAD setup program completes, a second program will run. This program is the USB key driver install program named "KEYLOK Security Key Installation". Check only the "USB Dongle" check box. On the bottom of the setup page make sure ONLY the "Standalone" option is selected. Then click the "Begin Install" button on the lower right side. After the installer completes, install the USB Key to complete the driver install.

The INSTALL routine MUST be completed BEFORE connecting the USB software key. When you connect the USB software key, Windows will generate a "new USB device" message. Allow Windows to search for the driver, and it should find it. Once this step has been completed, you are ready to run PiezoCAD.

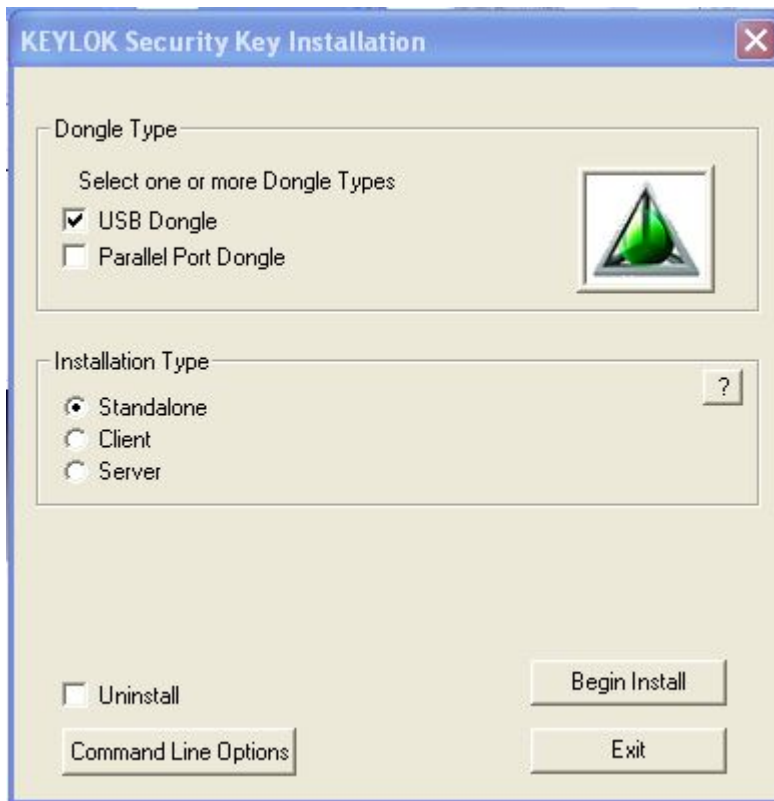

C. Solving Installation Problems

Appendix A lists all the files which are supplied on the distribution CD-ROM, and the directories in which they appear when installed correctly. If you encounter an installation problem, first check that all the files shown in Appendix A appear on your hard disk, in the appropriate locations. Any error messages should be reported to Sonic Concepts using the contact information given in the front of the manual.

D. Solving Operational issues

Microsoft has changed what is included in the distribution of windows. The change that affects PiezoCAD is with windows Vista and Windows 7. For the help file to operate correctly you need to download and install winhlp32.exe from Microsoft. Microsoft does not allow up to include this on our CD.

<http://www.microsoft.com/downloads/details.aspx>

Search for “winhlp32.exe” on Microsoft’s website
Select the correct download for Vista or Windows 7.